



**OWNER'S MANUAL
USO E MANUTENZIONE
MANUAL DEL PROPIETARIO**

**CBR600RR
CBR600RR ABS**

Honda CBR600RR/CBR600RR ABS

OWNER'S MANUAL

USO E MANUTENZIONE

MANUAL DEL PROPIETARIO

IMPORTANT INFORMATION

- **OPERATOR AND PASSENGER**

This motorcycle is designed to carry the operator and one passenger. Never exceed the maximum weight capacity as shown on the accessories and loading label.

- **ON-ROAD USE**


This motorcycle is designed to be used only on the road.

- **READ THIS OWNER'S MANUAL CAREFULLY**

Pay special attention to the safety messages that appear throughout the manual. These messages are fully explained in the "A Few Words About Safety" section which appears before the Contents page.

This manual should be considered a permanent part of the motorcycle and should remain with the motorcycle when resold.

Honda CBR600RR/ CBR600RR ABS OWNER'S MANUAL

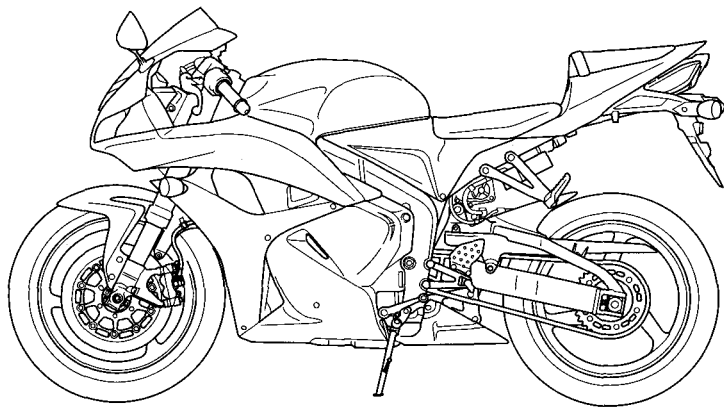

All information in this publication is based on the latest production information available at the time of approval for printing. Honda Motor Co.,Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

WELCOME

The motorcycle presents you a challenge to master the machine, a challenge to adventure. You ride through the wind, linked to the road by a vehicle that responds to your commands as no other does. Unlike an automobile, there is no metal cage around you. Like an airplane, a pre-ride inspection and regular maintenance are essential to your safety. Your reward is freedom.

To meet the challenges safely, and to enjoy the adventure fully, you should become thoroughly familiar with this owner's manual **BEFORE YOU RIDE THE MOTORCYCLE**.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. This information is intended to help you avoid damage to your motorcycle, other property, or the environment.

When service is required, remember that your Honda dealer knows your motorcycle best. If you have the required mechanical "know-how" and tools, your dealer can supply you with an official Honda Shop Manual to help you perform many maintenance and repair tasks.

Pleasant riding, and thank you for choosing a Honda !

- The following codes in this manual indicate each country.
- The illustrations herein are based on the CBR600RR ABS ED type.

CBR600RR

E	UK	III E	(E Type III)
F	France Belgium	II F	(F Type II)
ED	European direct sales	II ED	(ED Type II)
U	Australia New Zealand	II U	(U Type II)
KO	Korea		
BR	Brazil		

CBR600RR ABS

E	UK
F	France Belgium
ED	European direct sales
U	Australia New Zealand
KO	Korea
BR	Brazil

- The specifications may vary with each locale.


A FEW WORDS ABOUT SAFETY

Your safety, and the safety of others, is very important. And operating this motorcycle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a motorcycle. You must use your own good judgment.

You will find important safety information in a variety of forms, including:

- **Safety Labels** — on the motorcycle.
- **Safety Messages** — preceded by a safety alert symbol  and one of three signal words: **DANGER, WARNING, or CAUTION.**

These signal words mean:

▲ DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

▲ WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

▲ CAUTION

You **CAN** be **HURT** if you don't follow instructions.

- **Safety Headings** — such as Important Safety Reminders or Important Safety Precautions.
- **Safety Section** — such as Motorcycle Safety.
- **Instructions** — how to use this motorcycle correctly and safely.

This entire manual is filled with important safety information — please read it carefully.

OPERATION

page

1 MOTORCYCLE SAFETY

- 1 IMPORTANT SAFETY INFORMATION
- 2 PROTECTIVE APPAREL
- 4 LOAD LIMITS AND GUIDELINES
- 8 IMAGE LABELS

13 PARTS LOCATION

- 16 INSTRUMENTS AND INDICATORS

34 MAJOR COMPONENTS

(Information you need to operate this motorcycle)

- 34 SUSPENSION
- 40 BRAKES
- 43 CLUTCH
- 45 COOLANT
- 47 FUEL
- 50 ENGINE OIL
- 52 TUBELESS TYRES

page

58 ESSENTIAL INDIVIDUAL COMPONENTS

- 58 IGNITION SWITCH
- 59 KEYS
- 61 IMMOBILIZER SYSTEM (HISS)
- 65 RIGHT HANDLEBAR CONTROLS
- 66 LEFT HANDLEBAR CONTROLS
- 68 HESD (Honda Electronic Steering Damper)

page

69 FEATURES

(Not required for operation)

- 69 STEERING LOCK
- 70 SEAT
- 72 HELMET HOLDER
- 73 DOCUMENT BAG
- 74 STORAGE COMPARTMENT FOR
U-SHAPED ANTI-THEFT LOCK
- 75 LOWER COWL
- 76 MIDDLE COWL
- 77 HEADLIGHT AIM VERTICAL
ADJUSTMENT

page

78 OPERATION

- 78 PRE-RIDE INSPECTION
- 80 STARTING THE ENGINE
- 84 RUNNING-IN
- 85 RIDING
- 87 BRAKING
- 91 PARKING
- 92 ANTI-THEFT TIPS

MAINTENANCE

page

93 MAINTENANCE

- 93 THE IMPORTANCE OF MAINTENANCE
- 94 MAINTENANCE SAFETY
- 95 SAFETY PRECAUTIONS
- 96 MAINTENANCE SCHEDULE
- 99 TOOL KIT
- 100 SERIAL NUMBERS
- 101 COLOUR LABEL
< Except BR type >
- 102 ENGINE OIL
- 108 SPARK PLUGS
- 114 THROTTLE OPERATION
- 115 COOLANT
- 116 DRIVE CHAIN
- 122 DRIVE CHAIN SLIDER
- 123 FRONT AND REAR SUSPENSION INSPECTION
- 124 SIDE STAND
- 125 WHEEL REMOVAL
- 132 BRAKE PAD WEAR
- 134 BATTERY
- 136 FUSE REPLACEMENT

page

- 139 BRAKELIGHT SWITCH ADJUSTMENT
- 140 BULB REPLACEMENT

146 CLEANING

151 STORAGE GUIDE

- 151 STORAGE
- 153 REMOVAL FROM STORAGE

154 TAKING CARE OF THE UNEXPECTED

155 SPECIFICATIONS

160 CATALYTIC CONVERTER

MOTORCYCLE SAFETY

IMPORTANT SAFETY INFORMATION

Your motorcycle can provide many years of service and pleasure — if you take responsibility for your own safety and understand the challenges that you can meet on the road.

There is much that you can do to protect yourself when you ride. You'll find many helpful recommendations throughout this manual. Following are a few that we consider to be most important.

Always Wear a Helmet

It's a proven fact: helmets significantly reduce the number and severity of head injuries. So always wear an approved motorcycle helmet and make sure your passenger does the same. We also recommend that you wear eye protection, sturdy boots, gloves, and other protective gear (page 2).

Make Yourself Easy to See

Some drivers do not see motorcycles because they are not looking for them. To make yourself more visible, wear bright reflective clothing, position yourself so other drivers can see you, signal before turning or changing lanes, and use your horn when it will help others notice you.

Ride Within Your Limits

Pushing the limits is another major cause of motorcycle accidents. Never ride beyond your personal abilities or faster than conditions warrant. Remember that alcohol, drugs, fatigue and inattention can significantly reduce your ability to make good judgements and ride safely.

Don't Drink and Ride

Alcohol and riding don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and ride, and don't let your friends drink and ride either.

Keep Your Bike in Safe Condition

For safe riding, it's important to inspect your motorcycle before every ride and perform all recommended maintenance. Never exceed load limits, and only use accessories that have been approved by Honda for this motorcycle. See page 4 for more details.

PROTECTIVE APPAREL

For your safety, we strongly recommend that you always wear an approved motorcycle helmet, eye protection, boots, gloves, trousers, and a long-sleeved shirt or jacket whenever you ride. Although complete protection is not possible, wearing proper gear can reduce the chance of injury when you ride.

Following are suggestions to help you choose proper gear.

⚠ WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Be sure you and your passenger always wear a helmet, eye protection and other protective apparel when you ride.

Helmets and Eye Protection

Your helmet is your most important piece of riding gear because it offers the best protection against head injuries. A helmet should fit your head comfortably and securely. A bright-coloured helmet can make you more noticeable in traffic, as can reflective strips.

An open-face helmet offers some protection, but a full-face helmet offers more. Always wear a face shield or goggles to protect your eyes and help your vision.

Additional Riding Gear

In addition to a helmet and eye protection, we also recommend:

- Sturdy boots with non-slip soles to help protect your feet and ankles.
- Leather gloves to keep your hands warm and help prevent blisters, cuts, burns and bruises.
- A motorcycle riding suit or jacket for comfort as well as protection. Bright-coloured and reflective clothing can help make you more noticeable in traffic. Be sure to avoid loose clothes that could get caught on any part of your motorcycle.

To avoid possible heat damage to your motorcycle or personal belongings, do not block or restrict air flow around the exhaust muffler with baggage or clothing.

LOAD LIMITS AND GUIDELINES

Your motorcycle has been designed to carry you and one passenger. When you carry a passenger, you may feel some difference during acceleration and braking. But so long as you keep your motorcycle well-maintained, with good tyres and brakes, you can safely carry loads within the given limits and guidelines.

However, exceeding the weight limit or carrying an unbalanced load can seriously affect your motorcycle's handling, braking and stability. Non-Honda accessories, improper modifications, and poor maintenance can also reduce your safety margin.

The following pages give more specific information on loading, accessories and modifications.

Loading

How much weight you put on your motorcycle, and how you load it, are important to your safety. Anytime you ride with a passenger or cargo you should be aware of the following information.

WARNING

Overloading or improper loading can cause a crash and you can be seriously hurt or killed.

Follow all load limits and other loading guidelines in this manual.

Load Limits

Following are the load limits for your motorcycle:

Maximum weight capacity:

180 kg (397 lb)

Includes the weight of the rider, passenger, all cargo and all accessories

Maximum cargo weight:

14 kg (31 lb)

The weight of added accessories will reduce the maximum cargo weight you can carry.

Loading Guidelines

Your motorcycle is primarily intended for transporting you and a passenger. You may wish to secure a jacket or other small items to the seat when you are not riding with a passenger.

If you wish to carry more cargo, check with your Honda dealer for advice, and be sure to read the information regarding accessories on page 6 .

Improperly loading your motorcycle can affect its stability and handling. Even if your motorcycle is properly loaded, you should ride at reduced speeds and never exceed 130 km/h (80 mph) when carrying cargo.

Follow these guidelines whenever you carry a passenger or cargo:

- Check that both tyres are properly inflated (page 52).
- If you change your normal load, you may need to adjust the front suspension (page 34) and the rear suspension (page 37).
- To prevent loose items from creating a hazard, make sure that all cargo is securely tied down before you ride away.
- Place cargo weight as close to the center of the motorcycle as possible.
- Balance cargo weight evenly on both sides.
- To avoid possible heat damage to your motorcycle or personal belongings, do not block or restrict air flow around the exhaust muffler with baggage or clothing.

Accessories and Modifications

Modifying your motorcycle or using non-Honda accessories can make your motorcycle unsafe. Before you consider making any modifications or adding an accessory, be sure to read the following information.

WARNING

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Accessories

We strongly recommend that you use only Honda Genuine Accessories that have been specifically designed and tested for your motorcycle. Because Honda cannot test all other accessories, you must be personally responsible for proper selection, installation and use of non-Honda accessories. Check with your dealer for assistance and always follow these guidelines:

- Make sure the accessory does not obscure any lights, reduce ground clearance and banking angle, limit suspension travel or steering travel, alter your riding position or interfere with operating any controls.
- Be sure electrical equipment does not exceed the motorcycle's electrical system capacity (page 159). A blown fuse can cause a loss of lights or engine power.

- Do not pull a trailer or sidecar with your motorcycle. This motorcycle was not designed for these attachments, and their use can seriously impair your motorcycle's handling.

Modifications

We strongly advise you not to remove any original equipment or modify your motorcycle in any way that would change its design or operation. Such changes could seriously impair your motorcycle's handling, stability and braking, making it unsafe to ride.

Removing or modifying your lights, mufflers, emission control system or other equipment can also make your motorcycle illegal.

IMAGE LABELS

< Except BR type >

The following pages describe the label meanings. Some labels warn you of potential hazards that could cause serious injury. Others provide important safety information. Read this information carefully and don't remove the labels.

If a label comes off or becomes hard to read, contact your Honda dealer for a replacement.

There is a specific symbol on each label. The meanings of each symbol and label are as follows.



Read instructions contained in Owner's Manual carefully.



Read instructions contained in Shop Manual carefully.
In the interest of safety, take the motorcycle to be serviced only by a Honda dealer.



DANGER (with RED background)

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.



WARNING (with ORANGE background)

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.



CAUTION (with YELLOW background)

You **CAN** be **HURT** if you don't follow instructions.




RADIATOR CAP LABEL

DANGER

NEVER OPEN WHEN HOT.

Hot coolant will scald you.

Relief pressure valve begins to open at 1.1 kgf/cm².

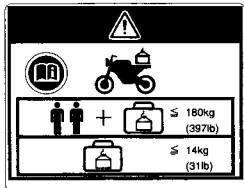


ACCESSORIES AND LOADING WARNING LABEL

WARNING

ACCESSORIES AND LOADING

- The safety stability and handling of this motorcycle may be affected by the addition of accessories and luggage.
- Read carefully the instructions contained in user's manual and installation guide before installing any accessory.
- The total weight of accessories and luggage added to rider's and passenger's weight should not exceed 180 kg (397 lb) , which is the maximum weight capacity.
- The luggage weight must not exceed 14 kg (31 lb) under any circumstances.
- The fitting of large fork-mounted or large handlebar-mounted fairing is not recommended.



TYRE INFORMATION LABEL

Cold tyre pressure:

[Driver and passenger]

Front 250 kPa (2.50 kgf/cm², 36 psi)

Rear 290 kPa (2.90 kgf/cm², 42 psi)

[Driver only]

Front 250 kPa (2.50 kgf/cm², 36 psi)

Rear 290 kPa (2.90 kgf/cm², 42 psi)

Tyre size:

Front 120/70ZR17M/C (58W)

Rear 180/55ZR17M/C (73W)

Tyre brand: DUNLOP

Front Qualifier PTG

Rear Qualifier PTG

Tyre brand: BRIDGESTONE

Front BT015F RADIAL F

Rear BT015R RADIAL E


**REAR CUSHION LABEL****GAS FILLED**

Do not open.

Do not heat.

**SAFETY REMINDER LABEL**


For your protection, always wear your helmet while riding.


FUEL LABEL**UNLEAD FUEL ONLY****PREMIUM RECOMMENDED****DRIVE CHAIN LABEL**


Keep chain adjusted and lubricated.

30 - 40 mm (1.2 - 1.6 in) Freeplay

PARTS LOCATION

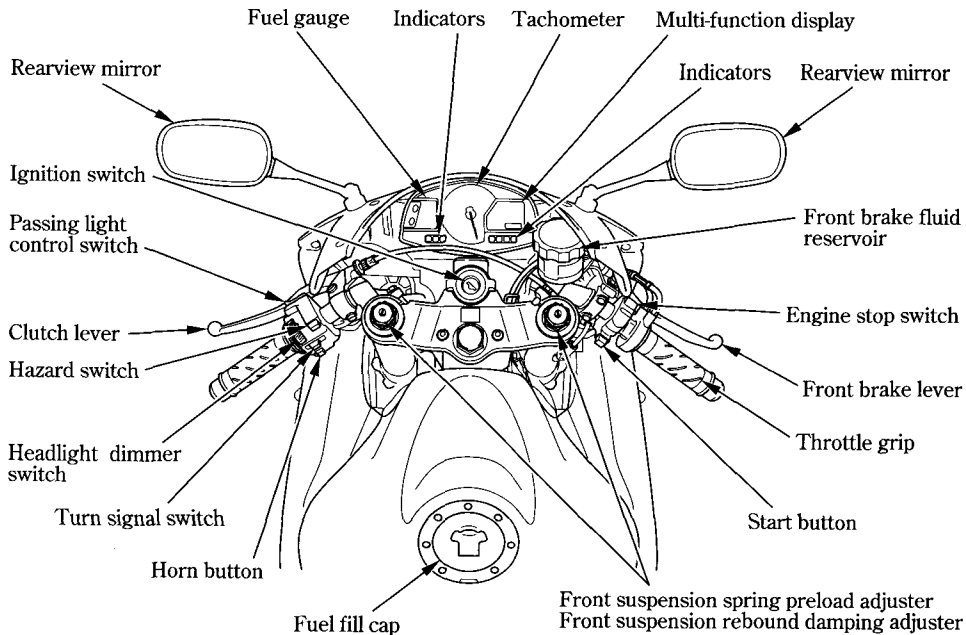

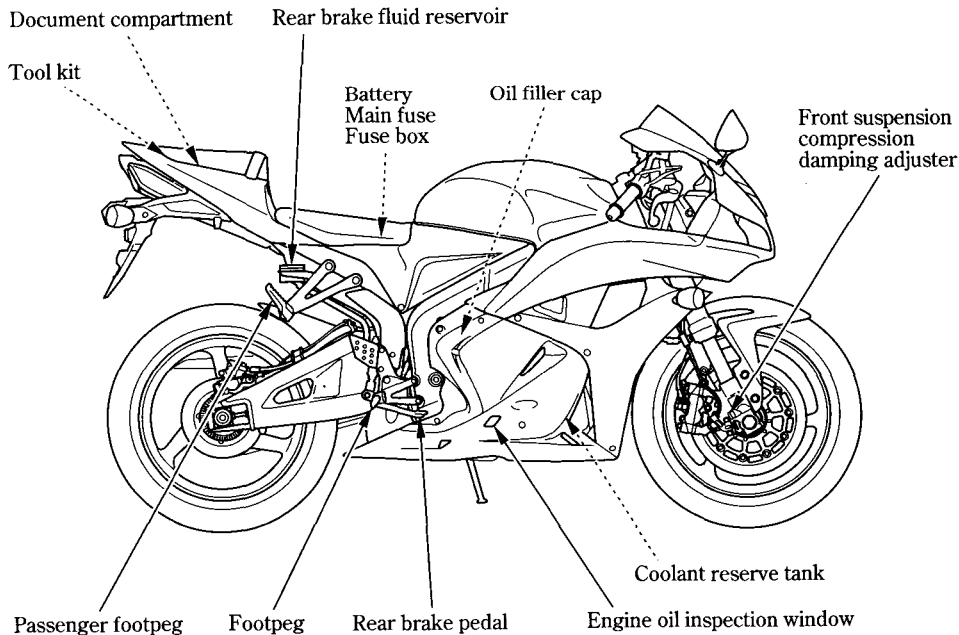

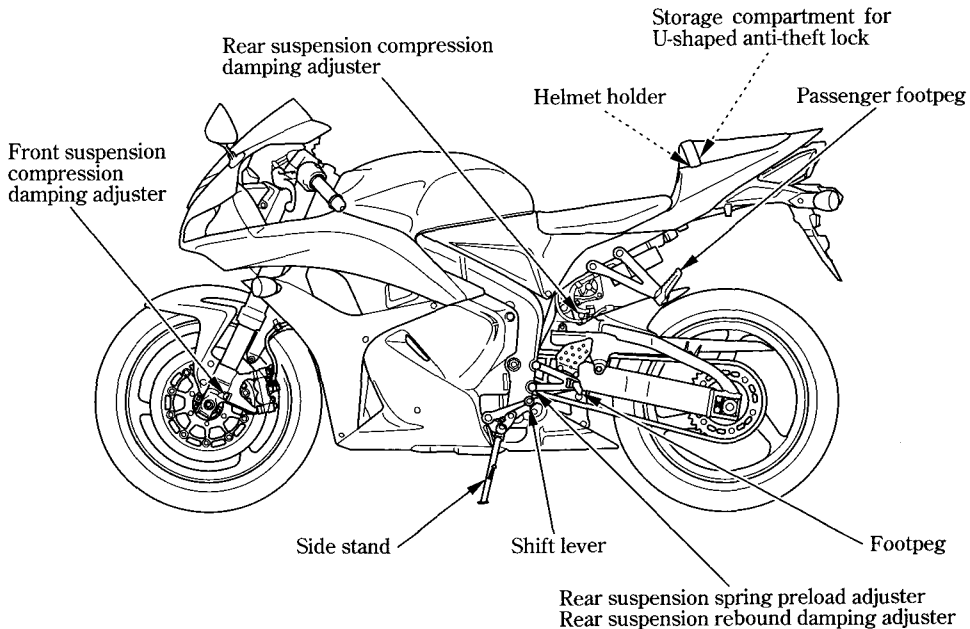


INSTRUMENTS AND INDICATORS

The indicators are contained in the instrument panel. Their functions are described in the tables on the following pages.

- (1) Fuel gauge
- (2) Left turn signal indicator
- (3) Immobilizer system (HISS) indicator
- (4) Tachometer
- (5) Tachometer red zone
- (6) Right turn signal indicator
- (7) Multi-function display
- (8) HESD indicator
- (9) PGM-FI malfunction indicator lamp (MIL)
- (10) High coolant temperature indicator
- (11) Low oil pressure indicator
- (12) Neutral indicator
- (13) High beam indicator
- (14) Combined ABS indicator (CBR600RR ABS)

- (15) RESET button
- (16) SEL button

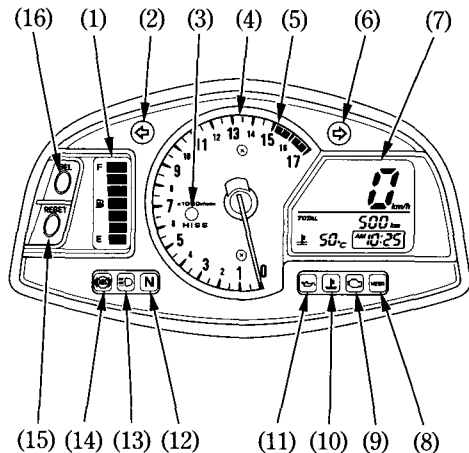

(Ref.No.) Description	Function
(1) Fuel gauge	Shows approximate fuel supply available (page 25). This gauge shows the initial display (page 24).
(2) Left turn signal indicator (green)	Flashes when the left turn signal operates. Should light for a few seconds and then go off when the ignition switch is turned ON.
(3) Immobilizer system (HISS) indicator (red)	This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at \odot (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start (page 61). When the blinking function of this indicator is valid and the ignition switch is OFF, it keeps blinking for 24 hours (page 62).

(Ref.No.) Description	Function
(4) Tachometer	Shows engine revolutions per minute. The tachometer needle will swing to the maximum scale on the dial once when the ignition switch is turned ON.
(5) Tachometer red zone	Never allow the tachometer needle to enter the red zone, even after the engine has been broken in. NOTICE Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.
(6) Right turn signal indicator (green)	Flashes when the right turn signal operates. Should light for a few seconds and then go off when the ignition switch is turned ON.

(Ref.No.) Description	Function
(7) Multi-function display	The display includes the following functions; This display shows the initial display (page 24).
Speedometer	Shows riding speed (page 30).
Odometer	Shows accumulated mileage (page 30).
Tripmeter	Shows mileage per trip (page 30).
Digital clock	Shows hour and minute (page 32).
Coolant temperature meter	Shows coolant temperature (page 28).

(Ref.No.) Description	Function
(8) HESD indicator (red)	<p>Lights when there is any abnormality in the HESD (Honda Electronic Steering Damper). Should also go on for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at ○ (RUN).</p> <p>If it comes on at any other time, reduce speed and take the motorcycle to your Honda dealer as soon as possible (page 68).</p>
(9) PGM-FI malfunction indicator lamp (MIL) (amber)	<p>Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at ○ (RUN). If the indicator comes on at any other time, reduce speed and take the motorcycle to a Honda dealer as soon as possible.</p>

(Ref.No.) Description	Function
(10) High coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature. Should also lights for a few seconds and then go off when the ignition switch is turned ON. If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 45 – 46 and do not ride the motorcycle until the problem has been corrected.</p> <p>NOTICE</p> <p>Exceeding maximum running temperature may cause serious engine damage.</p>
(11) Low oil pressure indicator (red)	<p>Lights when the engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>NOTICE</p> <p>Running the engine with insufficient oil pressure may cause serious engine damage.</p>

(Ref.No.) Description	Function
(12) Neutral indicator (green)	Lights when the transmission is in neutral. Should also light for a few seconds and then go off when the ignition switch is turned ON.
(13) High beam indicator (blue)	Lights when the headlight is on high beam. Should also light for a few seconds and then go off when the ignition switch is turned ON.
(14) Combined ABS indicator (amber) (CBR600RR ABS)	This indicator normally comes on when the ignition switch is turned ON, and goes off after you ride the motorcycle at speed above 10 km/h (6 mph). If there is a problem with the Combined ABS, this indicator lights or flashes and remains on (page 90).


(Ref.No.) Description	Function
(15) RESET button	<p>This button is used to reset the tripmeter (page 30) or to adjust the time (page 32).</p> <p>E, III E type: This button is used to reset the tripmeter or to adjust the time or to change the speed and mileage units for the speedometer/odometer/tripmeter (page 31).</p>
(16) SEL button	<p>This button is used to select the odometer, tripmeter A and tripmeter B (page 30) or to adjust the time (page 32).</p>

Initial Display

When the ignition switch is turned ON, the multi-function display (1) and fuel gauge (2) will temporarily show all the modes and digital segments. Thereafter, the speedometer (3) will show from 290 km/h to 0 km/h (E, III E type: From 180 mph to 0 mph in mph) so that you can make sure the liquid crystal display is functioning properly.

The unit “mph” (4) and “mile” (5) will be displayed for E, III E type.

Digital clock (6) and tripmeter (7) will reset if the battery is disconnected.

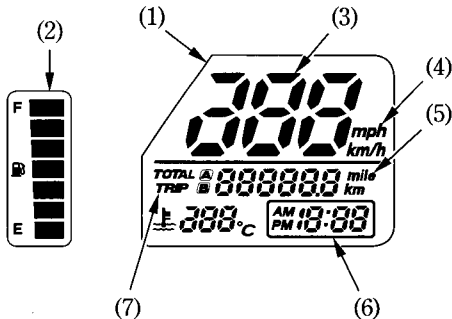

- (1) Multi-function display
- (2) Fuel gauge
- (3) Speedometer
- (4) “mph”
- (5) “mile”
- (6) Digital clock
- (7) Tripmeter

Fuel Gauge



The fuel gauge liquid crystal display (1) shows the approximate fuel supply available in a graduated display. When the segment F (2) goes on, the fuel tank capacity including reserve is:

18.0 ℓ (4.76 US gal , 3.96 Imp gal)

When segment E (3) flashes, fuel will be low and you should refill the tank as soon as possible.

The amount of fuel left in the tank with the vehicle set upright is approximately:

3.8 ℓ (1.00 US gal , 0.84 Imp gal)

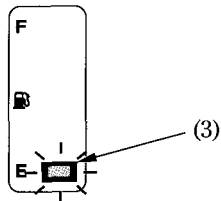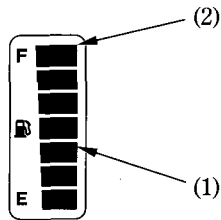


- (1) Fuel gauge liquid crystal display
- (2) Segment F
- (3) Segment E

Fuel Gauge Failure Indication:

If the fuel system has an error, the fuel gauge indicators will be displayed as shown in the illustration.


If this occurs, see your Honda dealer as soon as possible.

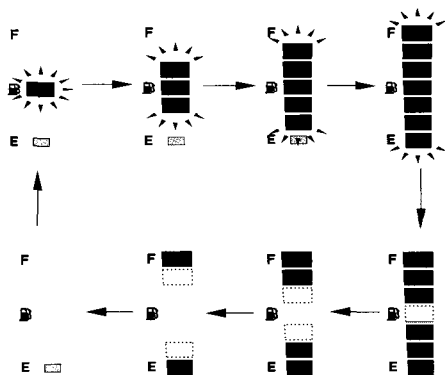

Multi-function Display

Multi-function display (1) includes the following functions:

- Speedometer
- Odometer/Tripmeter
- Digital clock
- Coolant temperature meter

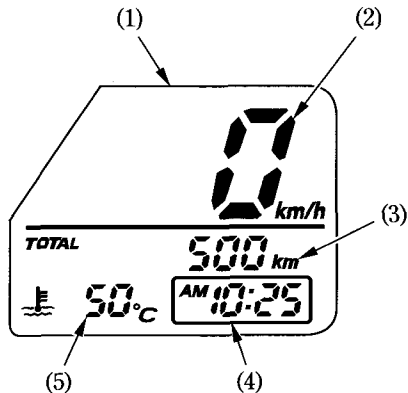


- (1) Multi-function display
- (2) Speedometer
- (3) Odometer/Tripmeter
- (4) Digital clock
- (5) Coolant temperature meter

Coolant Temperature Meter

The coolant temperature meter (1) shows coolant temperature digitally.

Temperature Display:

Below 34°C	“— —” is displayed.
Between 35°C and 121°C	Actual coolant temperature is indicated.
Between 122°C and 131°C	Actual coolant temperature is indicated and flashed.
Above 132°C	The display will remain on and flash “132°C”.

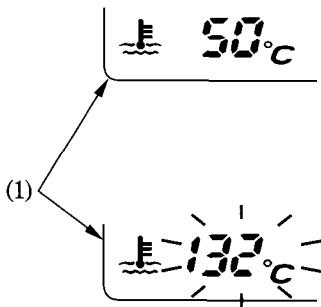

(1) Coolant temperature meter



Overheating Message:

When the coolant temperature reaches 122°C, the display begins to flash. At the same time, the high coolant temperature indicator (2) lights.

If this occurs, stop the engine and check the reserve tank coolant level. Read pages 45 – 46 and do not ride the motorcycle until the problem has been corrected.

NOTICE

Exceeding maximum running temperature may cause serious engine damage.

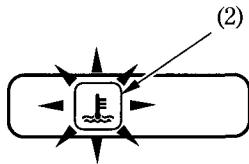

(2) High coolant temperature indicator

Speedometer/Odometer/Tripmeter/ Speed and Mileage Unit Change

Speedometer

Shows riding speed.

Odometer/Tripmeter


The odometer (2) shows accumulated mileage.

The tripmeter shows mileage per trip.

There are two tripmeters, tripmeter A (3) and tripmeter B (4).

Push the SEL button (5) to select the odometer, tripmeter A and tripmeter B.

To reset the tripmeter, push and hold the RESET button (6) when the display is in the tripmeter A or tripmeter B.

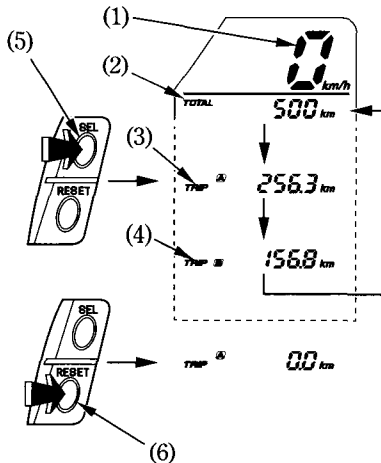

(1) Speedometer

(2) Odometer

(3) Tripmeter A

(4) Tripmeter B

(5) SEL button

(6) RESET button


Speed and Mileage Unit Change

< E, III E type only >

The speedometer displays both “km/h” and “mph”.

The odometer/tripmeter displays both “km” and “mile”.

Push the RESET button (6) to select “km/h”/“km” or “mph”/“mile” with the display in the tripmeter A mode.

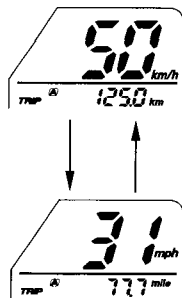


(6) RESET button

Digital Clock


Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Push and hold both the SEL button (2) and RESET button (3) for more than 2 seconds. The clock will be set in the adjust mode with the hour display flashing.

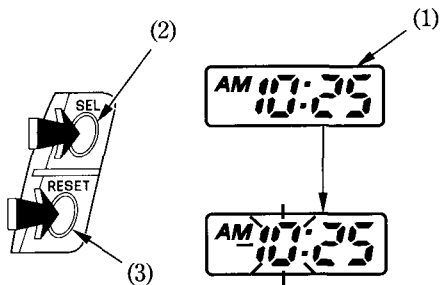


- (1) Digital clock
(2) SEL button
(3) RESET button

3. To set the hour, push the RESET button until the desired hour and AM/PM are displayed.
 - The time is advanced by one hour, each time the button is pushed.
 - The time advances fast when the button is pushed and held.

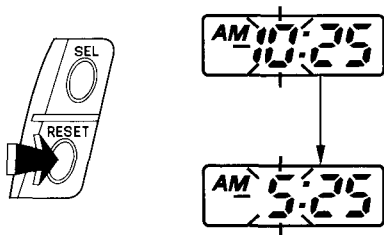


4. Push the SEL button. The minute display will start flashing.

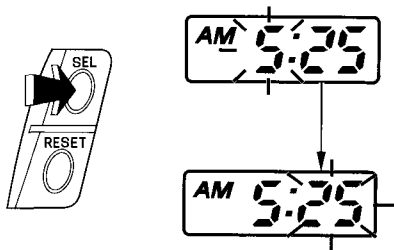

5. To set the minute, push the RESET button until the desired minute. The minute display will return to "00" when "60" is reached without affecting the hour display.

- The time advances by one minute, each time the button is pushed.
- The time advances fast when the button is pushed and held.

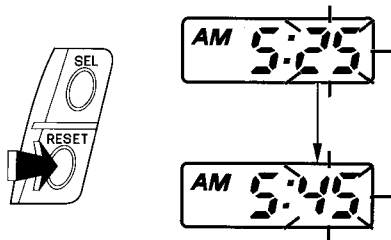

6. To end the adjustment, push the SEL button or turn the ignition switch OFF. The display will stop flashing automatically and the adjustment will be cancelled if the button is not pushed for about 30 seconds.

MAJOR COMPONENTS

(Information you need to operate this motorcycle)

SUSPENSION

Front Suspension

Spring Preload:

Adjust the spring preload by turning the spring preload adjuster with the 19 mm wrench provided in the tool kit (page 99).

To reduce (SOFT) :

Turn the adjuster counterclockwise toward SOFT for a light load and smooth road condition.


To increase (HARD) :

Turn the adjuster clockwise toward HARD for a firmer ride and rough road condition.

To adjust the adjuster to the standard position, proceed as follows :

1. Turn the preload adjuster (1) counterclockwise until it will no longer turn (lightly seats). This is the full soft setting.
2. The adjuster is set in the standard position when the adjuster is turned clockwise 5 turns.

3. Make sure that both fork legs are adjusted to the same position.

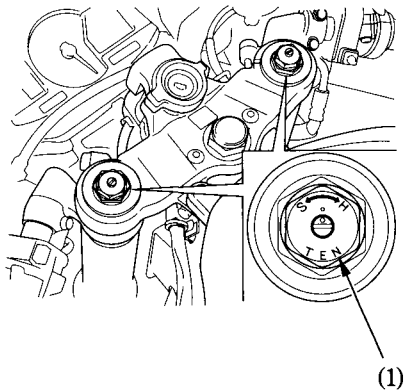

(1) Preload adjuster

Rebound Damping:

To reduce (SOFT) :


Turn the adjuster counterclockwise toward SOFT for a light load and smooth road condition.

To increase (HARD) :

Turn the adjuster clockwise toward HARD for a firmer ride and rough road condition.

To adjust the adjuster to the standard position, proceed as follows :

1. Turn the damping adjuster (1) clockwise until it will no longer turn (lightly seats). This is the full hard setting.
2. The adjuster is set in the standard position when the adjuster is turned counterclockwise approximately 2 1/2 turns so that its punch mark (2) aligns with the reference punch mark (3).
3. Make sure that both fork legs are adjusted to the same position.

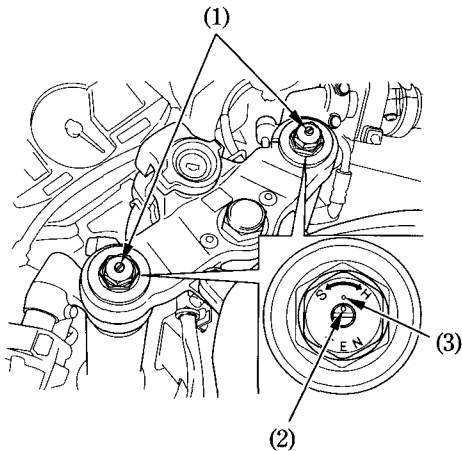

- (1) Damping adjuster (3) Reference punch mark
(2) Punch mark

Compression Damping:

To reduce (SOFT) :


Turn the adjuster counterclockwise toward SOFT for a light load and smooth road condition.

To increase (HARD) :

Turn the adjuster clockwise toward HARD for a firmer ride and rough road condition.

To adjust the adjuster to the standard position, proceed as follows :

1. Turn the damping adjuster (1) clockwise until it will no longer turn (lightly seats). This is the full hard setting.
2. The adjuster is set in the standard position when the adjuster is turned counterclockwise approximately 2 turns so that its punch mark (2) aligns with the reference punch mark (3).
3. Make sure that both fork legs are adjusted to the same position.

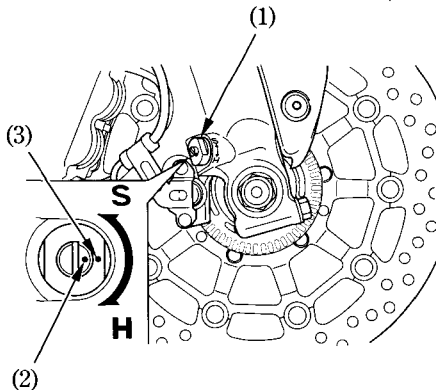

(1) Damping adjuster

(2) Punch mark

(3) Reference punch mark

mark

Rear Suspension

Rebound Damping:

To reduce (SOFT) :


Turn the adjuster counterclockwise toward SOFT for a light load and smooth road condition.

To increase (HARD) :

Turn the adjuster clockwise toward HARD for a firmer ride and rough road condition.

To adjust the adjuster to the standard position, proceed as follows :

1. Turn the damping adjuster (1) clockwise until it will no longer turn (lightly seats). This is the full hard setting.
2. The adjuster is set in the standard position when the adjuster is turned counterclockwise approximately $2\frac{1}{4}$ turns (CBR600RR) or $2\frac{1}{2}$ turns (CBR600RR ABS) so that its punch mark (2) aligns with the reference punch mark (3).

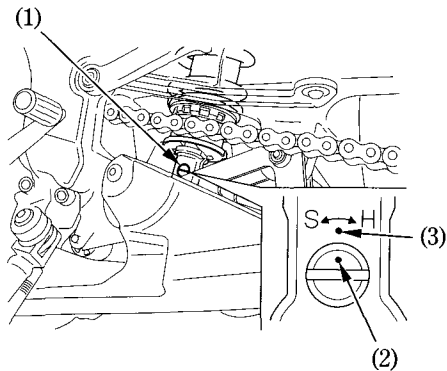

(1) Damping adjuster
(2) Punch mark

(3) Reference punch
mark

Compression Damping:

To reduce (SOFT) :

Turn the adjuster counterclockwise toward SOFT for a light load and smooth road condition.


To increase (HARD) :

Turn the adjuster clockwise toward HARD for a firmer ride and rough road condition.


To adjust the adjuster to the standard position, proceed as follows :

1. Turn the damping adjuster (1) clockwise until it will no longer turn (lightly seats). This is the full hard setting.
2. The adjuster is set in the standard position when the adjuster is turned counterclockwise approximately 24 clicks so that its punch mark (2) aligns with the reference punch mark (3).

< CBR600RR >

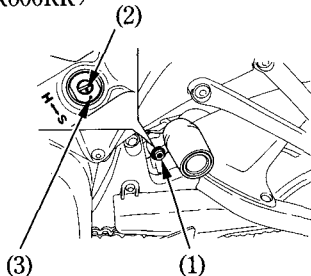

< CBR600RR ABS >

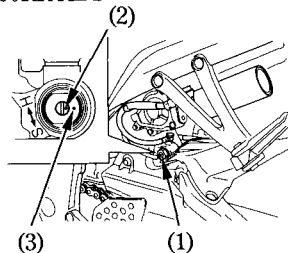

(1) Damping adjuster

(2) Punch mark

(3) Reference punch

mark


Spring Preload:

The spring preload adjuster (1) has 10 spring preload positions for different load or riding conditions.

Use the pin spanner (2) and extension bar (3) to adjust the rear shock.

Position 1 is for a light load and smooth road conditions. Position 2 is the standard position. Positions 3 to 10 increase spring preload for a stiffer rear suspension and can be used when the motorcycle is more heavily loaded.

The rear shock absorber assembly includes a damper unit that contains high pressure nitrogen gas. Do not attempt to disassemble or service the damper; it cannot be rebuilt and must be replaced when worn out. Disposal should only be done by your Honda dealer. The instructions found in this owner's manual are limited to adjustment of the shock assembly only.

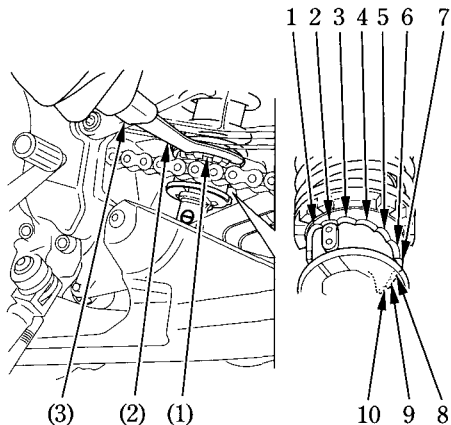

- (1) Spring preload adjuster
- (2) Pin spanner
- (3) Extension bar

BRAKES

Both the front and rear brakes are the hydraulic disc types.

As the brake pads wear, the brake fluid level drops.


There are no adjustments to perform, but fluid level and pad wear must be inspected periodically. The system must be inspected frequently to ensure there are no fluid leaks. If the brake lever or pedal free travel becomes excessive and the brake pads are not worn beyond the recommended limit (page 132), there is probably air in the brake system and it must be bled. See your Honda dealer for this service.

Front Brake Fluid Level:

With the motorcycle in an upright position, check the fluid level. It should be between the UPPER (1) and LOWER (2) level marks. If the level is at or below the LOWER level mark, check the front brake pads for wear (page 132).

Worn pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

The recommended brake fluid is Honda DOT 4 brake fluid from a sealed container, or an equivalent.

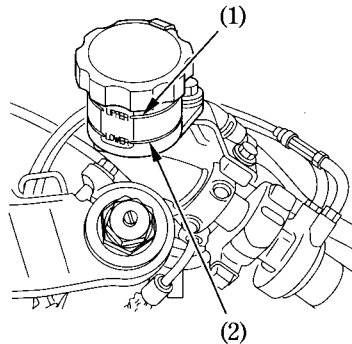


- (1) UPPER level mark
- (2) LOWER level mark

Front Brake Lever:

The distance between the tip of the brake lever (1) and the grip can be adjusted by turning the adjuster dial (2) while pushing the lever forward.

Align the numbers (3) on the adjuster dial with the index mark (4).

Apply the brake several times and check for free wheel rotation after the brake lever is released.

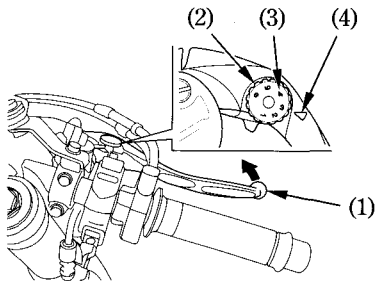

(1) Brake lever
(2) Adjuster dial

(3) Numbers
(4) Index mark

Other Checks:


Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.

Rear Brake Fluid Level:

With the motorcycle in an upright position, check the fluid level. It should be between the UPPER (1) and LOWER (2) level marks. If the level is at or below the LOWER level mark, check the rear brake pads for wear (page 133).

Worn pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

The recommended brake fluid is Honda DOT 4 brake fluid from a sealed container, or an equivalent.

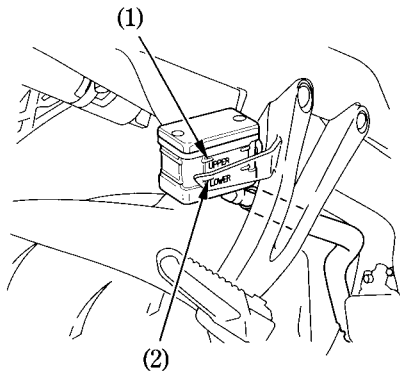


- (1) UPPER level mark
- (2) LOWER level mark

CLUTCH


Clutch adjustment may be required if the motorcycle stalls when shifting into gear or tends to creep; or if the clutch slips, causing acceleration to lag behind engine speed. Minor adjustments can be made with the clutch cable adjuster (3) at the clutch lever (1).

Normal clutch lever freeplay is:
10–20 mm (0.4–0.8 in)

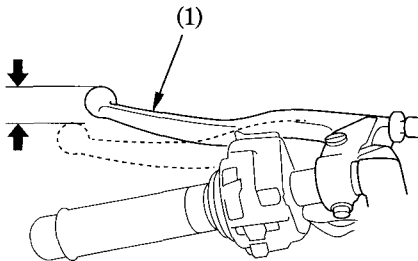

(1) Clutch lever

1. Loosen the lock nut (2) and turn the clutch cable adjuster. Tighten the lock nut and check the adjustment.
2. If the adjuster is threaded out near its limit or if the correct freeplay cannot be obtained, loosen the lock nut and turn in the clutch cable adjuster completely. Tighten the lock nut.

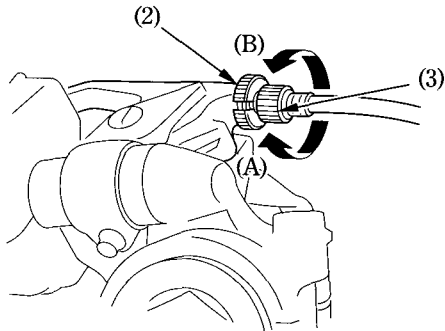


(2) Lock nut

(3) Clutch cable adjuster

(A) Increase freeplay

(B) Decrease freeplay

3. Remove the lower cowl (page 75).
4. Loosen the lock nut (4) at the lower end of the cable. Turn the adjusting nut (5) to obtain the specified freeplay. Tighten the lock nut and check the adjustment.
5. Install the lower cowl.

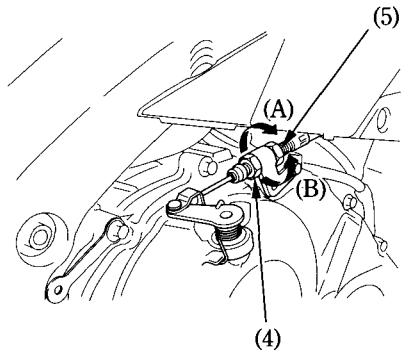

- | | |
|-------------------|-----------------------|
| (4) Lock nut | (A) Increase freeplay |
| (5) Adjusting nut | (B) Decrease freeplay |

6. Start the engine, pull in the clutch lever and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. The motorcycle should begin to move smoothly and accelerate gradually.

If proper adjustment cannot be obtained or the clutch does not work correctly, see your Honda dealer.

Other Checks:

Check the clutch cable for kinks or signs of wear that could cause sticking or failure. Lubricate the clutch cable with a commercially available cable lubricant to prevent premature wear and corrosion.

COOLANT

Coolant Recommendation

The owner must properly maintain the coolant to prevent freezing, overheating, and corrosion. Use only high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines. (SEE ANTIFREEZE CONTAINER LABEL).

Use only low-mineral drinking water or distilled water as a part of the antifreeze solution. Water that is high in mineral content or salt may be harmful to the aluminum engine.

Using coolant with silicate inhibitors may cause premature wear of water pump seals or blockage of radiator passages.

Using tap water may cause engine damage.

The factory provides a 50/50 solution of antifreeze and distilled water in this motorcycle. This coolant solution is recommended for most operating temperatures and provides good corrosion protection. A higher concentration of antifreeze decreases the cooling system performance and is recommended only when additional protection against freezing is needed. A concentration of less than 40/60 (40% antifreeze) will not provide proper corrosion protection. During freezing temperatures, check the cooling system frequently and add higher concentrations of antifreeze (up to a maximum of 60% antifreeze) if required.


Inspection

The reserve tank is behind the lower cowl. Check the coolant level in the reserve tank (1) while the engine is at the normal operating temperature with the motorcycle in an upright position. If the coolant level is below the LOWER level mark (2), remove the lower cowl (page 75) and the reserve tank cap (3).

Add coolant mixture until it reaches the UPPER level mark (4). Always add coolant to the reserve tank.

Do not attempt to add coolant by removing the radiator cap.

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your Honda dealer for repair.

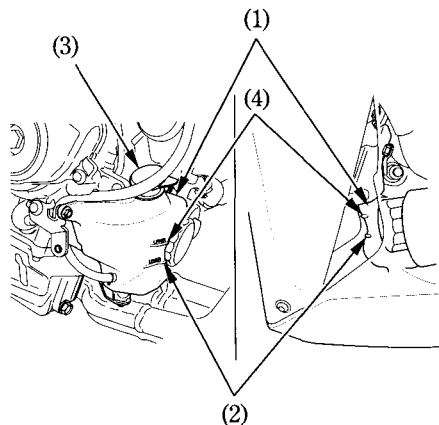

- (1) Reserve tank
- (2) LOWER level mark
- (3) Reserve tank cap
- (4) UPPER level mark

FUEL

Fuel Tank

The fuel tank capacity including the reserve supply is:

18.0 l (4.76 US gal, 3.96 Imp gal)

To open the fuel fill cap (1), insert the ignition key (2) and turn it clockwise. The fuel fill cap is hinged and will lift up.


Do not overfill the tank. There should be no fuel in the filler neck (3).

After refueling, to close the fuel fill cap, push the fuel fill cap into the filler neck until it snaps closed and locks. Remove the key.

! WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks, and flame away.
- Refuel only outdoors.
- Wipe up spills immediately.

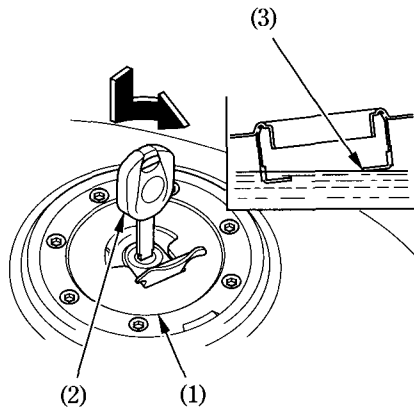

(1) Fuel fill cap
(2) Ignition key

(3) Filler neck

Use unleaded petrol with a research octane number of 95 or higher.

The use of leaded petrol will cause premature damage to the catalytic converter.

NOTICE

If “spark knock” or “pinking” occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinking persists, consult your Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited Warranty.

Petrol Containing Alcohol

If you decide to use a petrol containing alcohol (gasohol), be sure it's octane rating is at least as high as that recommended by Honda. There are two types of "gasohol": one containing ethanol, and the other containing methanol. Do not use petrol that contains more than 10 % ethanol. Do not use petrol containing methanol (methyl or wood alcohol) that does not also contain cosolvents and corrosion inhibitors for methanol. Never use petrol containing more than 5 % methanol, even if it has cosolvents and corrosion inhibitors.

The use of petrol containing more than 10 % ethanol (or more than 5 % methanol) may:

- Damage the painting of the fuel tank.
- Damage the rubber tubes of the fuel line.
- Cause corrosion of the fuel tank.
- Cause poor drivability.

Before buying fuel from an unfamiliar station, try to find out if the fuel contains alcohol. If it does, confirm the type and percentage of alcohol used. If you notice any undesirable operating symptoms while using a petrol that contains alcohol, or one that you think contains alcohol, switch to a petrol that you know does not contain alcohol.


ENGINE OIL

Engine Oil Level Check

Check the engine oil level each day before riding the motorcycle.

The level must be maintained between the upper (1) and lower (2) level marks in the inspection window (3).

1. Start the engine and let it idle for 3–5 minutes. Make sure the low oil pressure indicator goes off. If the indicator light remains on, stop the engine immediately.
2. Stop the engine and hold the motorcycle in an upright position on firm, level ground.
3. After 2–3 minutes, check that the oil level is between the upper and lower level marks in the inspection window.

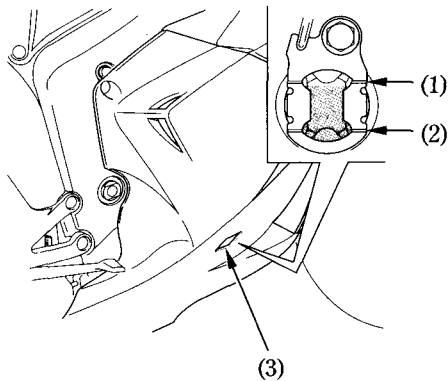


(1) Upper level mark
(2) Lower level mark

(3) Inspection window

4. If required, remove the lower cowl (page 75) and oil filler cap (4), and add the specified oil (page 102) up to the upper level mark. Do not overfill.
5. Reinstall the oil filler cap and lower cowl. Check for oil leaks.

NOTICE

Running the engine with insufficient oil pressure may cause serious engine damage.

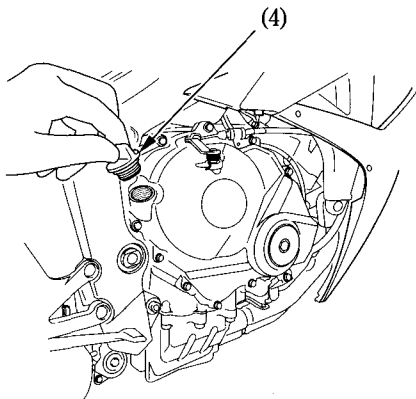

(4) Oil filler cap

TUBELESS TYRES

To safely operate your motorcycle, your tyres must be the proper type and size, in good condition with adequate tread, and correctly inflated for the load you are carrying. The following pages give more detailed information on how and when to check your air pressure, how to inspect your tyres for damage, and what to do when your tyres need to be repaired or replaced.

WARNING

Using tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tyre inflation and maintenance.

Air Pressure

Keeping your tyres properly inflated provides the best combination of handling, tread life and riding comfort. Generally, underinflated tyres wear unevenly, adversely affect handling, and are more likely to fail from being overheated.

Overinflated tyres make your motorcycle ride harshly, are more prone to damage from road hazards, and wear unevenly.

We recommend that you visually check your tyres before every ride and use a gauge to measure air pressure at least once a month or any time you think the tyres might be low.

Tubeless tyres have some self-sealing ability if they are punctured. However, because leakage is often very slow, you should look closely for punctures whenever a tyre is not fully inflated.

Always check air pressure when your tyres are “cold” – when the motorcycle has been parked for at least three hours. If you check air pressure when your tyres are “warm” – when the motorcycle has been ridden for even a few miles – the readings will be higher than if the tyres were “cold”. This is normal, so do not let air out of the tyres to match the recommended cold air pressures given below. If you do, the tyres will be underinflated.

The recommended “cold” tyre pressures are:

Front	250 kPa (2.50 kgf/cm ² , 36 psi)
Rear	290 kPa (2.90 kgf/cm ² , 42 psi)

Inspection

Whenever you check the tyre pressures, you should also examine the tyre treads and sidewalls for wear, damage, and foreign objects:

Look for:

- Bumps or bulges in the side of the tyre or the tread. Replace the tyre if you find any bumps or bulges.
- Cuts, splits or cracks in the tyre. Replace the tyre if you can see fabric or cord.
- Excessive tread wear.

Also, if you hit a pothole or hard object, pull to the side of the road as soon as you can safely and carefully inspect the tyres for damage.


Tread Wear

Replace tyres before tread depth at the center of the tyre reaches the following limit:

Minimum tread depth	
Front:	1.5 mm (0.06 in)
Rear:	2.0 mm (0.08 in)

<For Germany>

German law prohibits use of tyres whose tread depth is less than 1.6 mm.

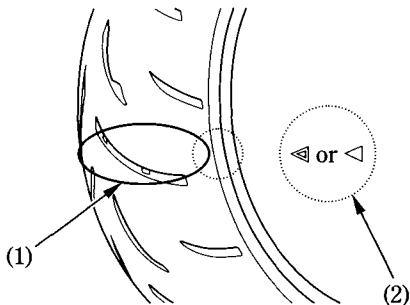

- (1) Wear indicator
- (2) Wear indicator location mark

Tyre Repair

If a tyre is punctured or damaged, you should replace it, not repair it. As discussed below, a tyre that is repaired, either temporarily or permanently, will have lower speed and performance limits than a new tyre.

A temporary repair, such as an external tubeless tyre plug, may not be safe for normal speeds and riding conditions. If a temporary or emergency repair is made to a tyre, you should ride slowly and cautiously to a dealer and have the tyre replaced. If possible, you should not carry a passenger or cargo until a new tyre is installed.

Even if a tyre is professionally repaired with a permanent internal patch plug, it will not be as good as a new tyre. You should not exceed 80 km/h (50 mph) for the first 24 hours, or 130 km/h (80 mph) at any time thereafter. In addition, you may not be able to safely carry as much weight as with a new tyre. Therefore, we strongly recommend that you replace a damaged tyre. If you choose to have a tyre repaired, be sure the wheel is balanced before you ride.

Tyre Replacement

The tyres that came on your motorcycle were designed to match the performance capabilities of your motorcycle and provide the best combination of handling, braking, durability and comfort.

WARNING

Installing improper tyres on your motorcycle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tyres recommended in this owner's manual.

The recommended tyres for your motorcycle are:

Front: 120/70ZR17M/C (58W)
DUNLOP
Qualifier PTG
BRIDGESTONE
BT015F RADIAL F

Rear: 180/55ZR17M/C (73W)
DUNLOP
Qualifier PTG
BRIDGESTONE
BT015R RADIAL E

Type: radial-ply, tubeless

Whenever you replace a tyre, use one that is equivalent to the original and be sure the wheel is balanced after the new tyre is installed.

Important Safety Reminders


- Do not install a tube inside a tubeless tyre on this motorcycle. Excessive heat build-up can cause the tube to burst.
- Use only tubeless tyres on this motorcycle. The rims are designed for tubeless tyres, and during hard acceleration or braking, a tube-type tyre could slip on the rim and cause the tyre to rapidly deflate.

ESSENTIAL INDIVIDUAL COMPONENTS

IGNITION SWITCH

The ignition switch (1) is below the indicator panel.


The headlight, position light, taillights and license light will come on whenever you turn the ignition switch ON. If your motorcycle is stopped with the ignition switch ON and the engine is not running, the headlight, position light, taillights and license light will still be on, resulting in battery discharge.

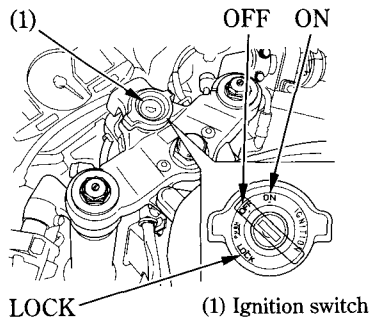

Key Position	Function	Key Removal
LOCK (steering lock)	Steering is locked. Engine and lights cannot be operated.	Key can be removed
OFF	Engine and lights cannot be operated.	Key can be removed
ON	Engine and lights can be operated.	Key cannot be removed

KEYS

This motorcycle has two keys and a key number plate.

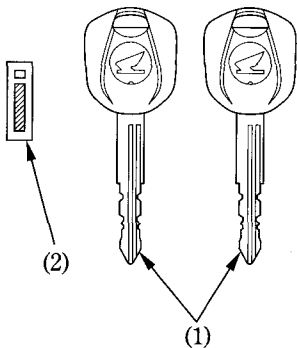

(1) Keys

(2) Key number plate

You will need the key number if you ever have to replace a key. Store the plate in a safe place.

To reproduce keys, bring all keys, key number plate and motorcycle to your Honda dealer.

Up to four keys can be registered with the immobilizer system (HISS), including the ones in hand.

If all keys are lost, the PGM-FI unit/ignition control module must be replaced. To avoid this possibility we recommend that if only one key is left, you immediately have it reproduced to ensure that a back-up is available.

These keys contain electronic circuits that are activated by the immobilizer system (HISS). They will not work to start the engine if the circuits are damaged.

- Do not drop the keys or set heavy objects on them.
- Do not grind, drill or in any way alter the original shape of the keys.
- Keep the keys away from magnetic objects.

IMMOBILIZER SYSTEM (HISS)

HISS is the abbreviation of Honda Ignition Security System.


The immobilizer system (HISS) protects your motorcycle from theft. A properly-coded key must be used in the ignition switch for the engine to start. If an improperly-coded key (or other device) is used the engine's starting circuit is disabled.

When the ignition switch is turned ON and the engine stop switch is at “ ○ ” (RUN), the immobilizer system (HISS) indicator lights for a few seconds, then goes off. If the indicator remains on, it means the system does not recognize the coding of the key. Turn the ignition switch to OFF, remove the key, reinsert and turn the switch ON again.

The immobilizer system has such a function that keeps the immobilizer system (HISS) indicator blinking at 2 second intervals for 24 hours. This blinking function can be turned on or off.

To alter the blinking function:

1. Turn the ignition switch ON.
2. Push and hold the SEL button (1) for more than 2 seconds.
The immobilizer system (HISS) indicator (2) instantly flashes, the function is enabled.
3. Turn the ignition switch OFF and remove the key.

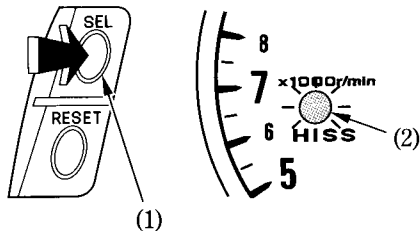

- (1) SEL button
(2) Immobilizer system (HISS) indicator

If the system repeatedly does not recognize the coding of your key, contact your Honda dealer.

- The system may not recognize the key's coding if any other immobilizer key is near the ignition switch. To make sure the system recognizes the key code, keep each immobilizer key on a separate ring.
- Do not attempt to alter the immobilizer system (HISS) or add other devices to it. Electrical problems could result, making it impossible to start your motorcycle.
- If all keys are lost, the PGM-FI unit/ignition control module must be replaced.

EC Directives

This immobilizer system complies with the R & TTE (Radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity) Directive.



The declaration of conformity to R & TTE Directive is provided to the owner at the time of purchase. The declaration of conformity should be kept at a safe place. When the declaration of conformity is lost or is not provided, contact your Honda dealer.

< South Africa only >



< BR type only >



Agência Nacional de Telecomunicações

0542-08-3333







(01) 07898921465038

This equipment operates on a secondary basis and, consequently, must accept harmful interference, including from stations of the same kind, and may not cause harmful interference to systems operating on a primary basis.

RIGHT HANDLEBAR CONTROLS

Engine Stop Switch

The engine stop switch (1) is next to the throttle grip. When the switch is in the  (RUN) position, the engine will operate. When the switch is in the  (OFF) position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the  (RUN) position.


If your motorcycle is stopped with the ignition switch ON and the engine stop switch  (OFF), the headlight, position light, taillights and license light will still be on, resulting in battery discharge.

Start Button

The start button (2) is below the engine stop switch.

The start button is used for starting the engine. Pushing the button in starts the engine. See Starting Procedure, page 82 .



When the start button is pushed, the starter motor will crank the engine, the headlight will automatically go out, but the position light, taillights and license light will stay on.

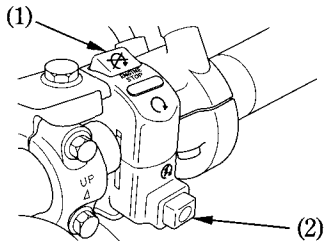

- (1) Engine stop switch
- (2) Start button

LEFT HANDLEBAR CONTROLS



Headlight Dimmer Switch (1)

Move the headlight dimmer switch to  (HI) to select high beam or to  (LO) to select low beam.

Passing Light Control Switch (2)


When this switch is pressed, the headlight flashes on to signal approaching cars or when passing.

Turn Signal Switch (3)

Move to  to signal a left turn,  to signal a right turn. Press to turn signal off.


Horn Button (4)

Press the button to sound the horn.

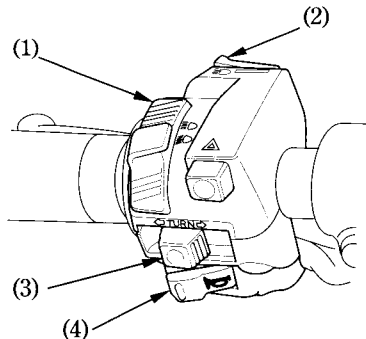


- (1) Headlight dimmer switch
- (2) Passing light control switch
- (3) Turn signal switch
- (4) Horn button

Hazard Switch (5)


The Hazard should be used only when your motorcycle is stopped under emergency or hazardous conditions. To turn it on, turn the ignition key to the ON position, and then push the switch marked . The front and rear turn signals will blink simultaneously.

All of the signals can blink without the ignition key.

To operate this function, proceed as follows:


1. Turn the ignition key to ON position and then push the hazard switch to the  marked position.
2. All of the turn signals will keep blinking even after you turn the ignition key to OFF position.
3. You can turn off the turn blinking signals by pushing the hazard switch back to the off position.

If the switch is off position for more than two seconds, and then moved back to the

 position again, the turn signals will not be on.

Be sure to turn the switch off when the hazard warning is no longer required, or the turn signals will not work properly, and may confuse other drivers.

If all the turn signals are left blinking with the engine stopped, the battery will be discharged.

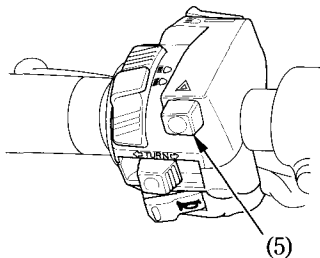


(5) Hazard switch

HESD (Honda Electronic Steering Damper)

This motorcycle is equipped with the electronically-controlled steering damper. The HESD (1) automatically controls the steering damper characteristics in accordance with vehicle speed and acceleration.

The HESD indicator (2) lights when there is any abnormality in the HESD. The HESD indicator should also go on for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at \odot (RUN).

If the HESD indicator lights at any time, reduce speed and take the motorcycle to your Honda dealer as soon as possible.

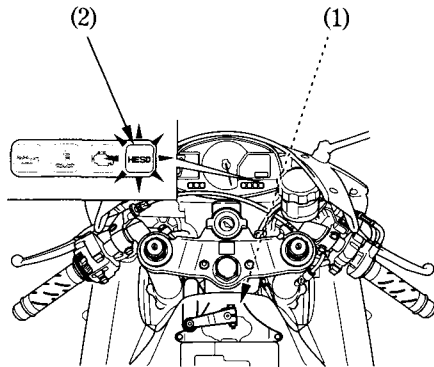

- (1) HESD
- (2) HESD indicator


FEATURES

(Not required for operation)

STEERING LOCK

To lock the steering, turn the handlebar all the way to the left, turn the ignition key (1) to LOCK while pushing in. Remove the key. To unlock the steering, turn the key to OFF while pushing in.

Do not turn the key to LOCK while riding the motorcycle; loss of vehicle control will result.

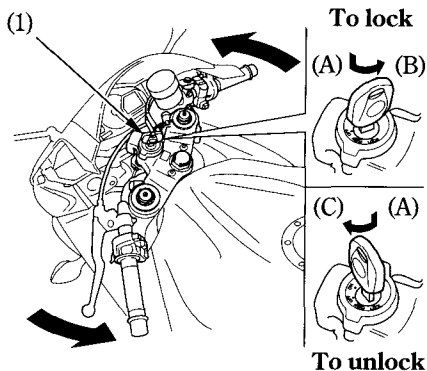

(1) Ignition key


(A) Push in
(B) Turn to LOCK
(C) Turn to OFF

SEAT

Front seat

To remove the front seat (1), pull up the seat end and remove the mounting bolts (2), and then pull the seat back and up.

To install the front seat, insert the tab (3) into the recess (4) under the frame and tighten the mounting bolts securely.

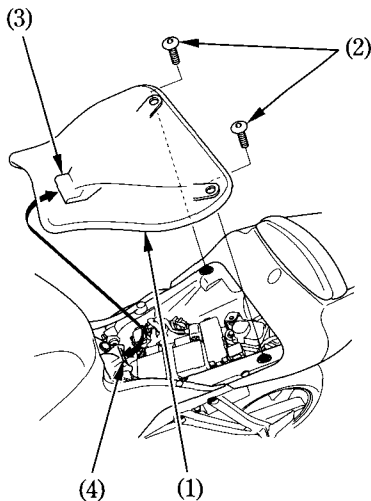

(1) Front seat

(2) Mounting bolts

(3) Tab


(4) Recess

Rear seat

To remove the rear seat (1), insert the ignition key (2) into the seat lock (3). Turn it clockwise, then pull the rear seat up and back.

To install the seat, insert the prongs (4) into the seat hook (5) and the guide hooks (6), and then push down on the front of the seat.

Be sure the seat is locked securely in position after installation.

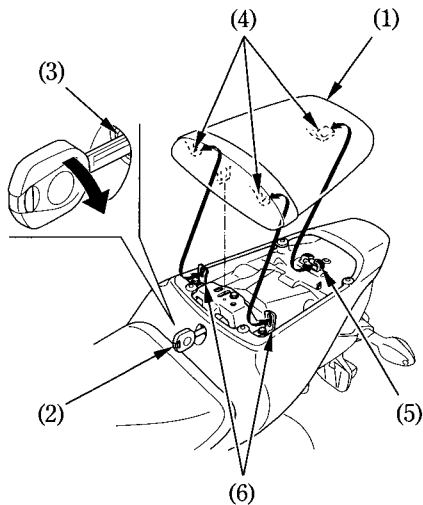

- (1) Rear seat
- (2) Ignition key
- (3) Seat lock

- (4) Prongs
- (5) Seat hook
- (6) Guide hooks

HELMET HOLDER

The helmet holder is located below the rear seat.

Remove the rear seat (page 71). Route the helmet wire (1) through the helmet D-ring (2) and hook the loops of the helmet wire onto the helmet holder (3).


Install the rear seat and lock it securely.

The helmet wire is furnished in the tool kit (page 99).

WARNING

Riding with a helmet attached to the holder can interfere with the rear wheel or suspension and could cause a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.

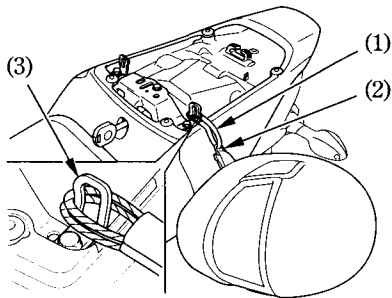


- (1) Helmet wire
- (2) Helmet D-ring

- (3) Helmet holder

DOCUMENT BAG

The document bag (1) is in the document compartment (2) under the rear seat (page 71).

This owner's manual and other documents should be stored in the document bag. When washing your motorcycle, be careful not to flood this area with water.

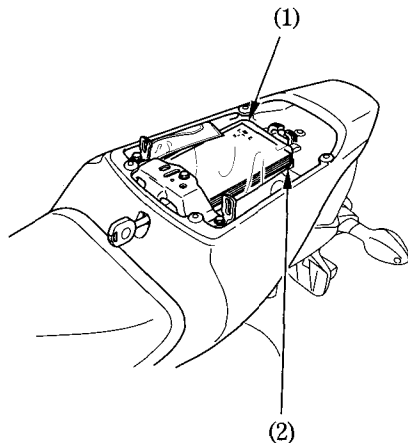


- (1) Document bag
- (2) Document compartment

STORAGE COMPARTMENT FOR U-SHAPED ANTI-THEFT LOCK

There is a storage compartment to store a U-shaped anti-theft lock under the rear seat (page 71).

Some U-shaped locks may not be stored in the compartment due to their size or design.

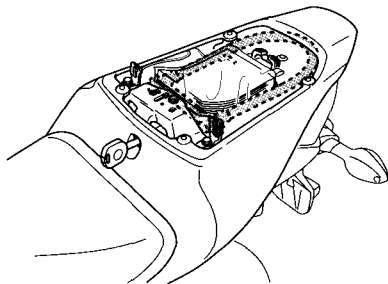

LOWER COWL

The lower cowl must be removed to adjust the clutch lever freeplay, to access the reserve tank, to replace the engine oil and oil filter, or to check the drive chain slider.

Removal:

1. Remove the bolts A (1), bolts B (2), bolts C (3), bolts D (4) and collar (5).

2. (CBR600RR)


Remove the lower cowl (6), then pull out the tubes A (7).

(CBR600RR ABS)

Remove the lower cowl and clamp (8), then pull out the tubes A and tube B (9).

Installation:

- Installation can be done in the reverse order of removal.
- Through the tubes properly in position.

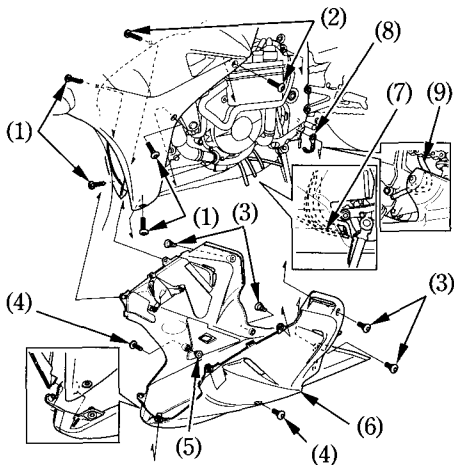

- | | |
|-------------|-----------------------------------|
| (1) Bolts A | (6) Lower cowl |
| (2) Bolts B | (7) Tubes A |
| (3) Bolts C | (8) Clamp
(CBR600RR ABS only) |
| (4) Bolts D | (9) Tube B
(CBR600RR ABS only) |
| (5) Collar | |

MIDDLE COWL

The middle cowl must be removed to service the spark plugs.


The right and left middle cowls can be removed in the same manner.

Removal:

1. Remove the bolt A (1) and bolts B (2).
2. Remove the clip A (3) and clips B (4).
3. Remove the middle cowl (5) and disconnect the front turn signal connector (6).
 - Be careful not to apply weight to the middle cowl.
 - Carefully release the each tabs.

Installation:


- Installation can be done in the reverse order of removal.

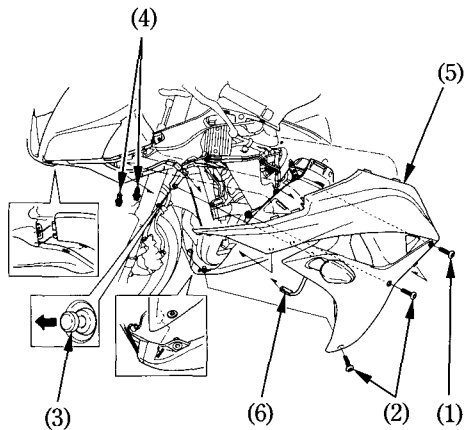

- | | |
|-------------|---------------------------------|
| (1) Bolt A | (4) Clips B |
| (2) Bolts B | (5) Middle cowl |
| (3) Clip A | (6) Front turn signal connector |

HEADLIGHT AIM VERTICAL ADJUSTMENT

Vertical adjustment can be made by turning the screw (low beam) (1) and screw (high beam) (2) in or out as necessary. Obey local laws and regulations.

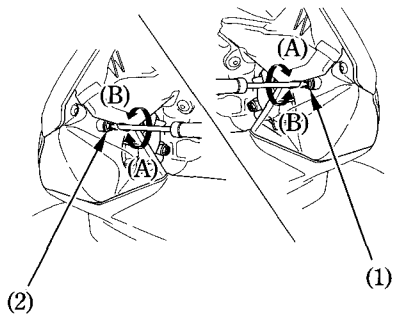

(1) Screw (low beam)

(A) Up

(2) Screw (high beam)

(B) Down

OPERATION

PRE-RIDE INSPECTION

For your safety, it is very important to take a few moments before each ride to walk around your motorcycle and check its condition. If you detect any problem, be sure you take care of it, or have it corrected by your Honda dealer.

⚠ WARNING

Improperly maintaining this motorcycle or failing to correct a problem before riding can cause a crash in which you can be seriously hurt or killed.

Always perform a pre-ride inspection before every ride and correct any problems.

1. Engine oil level—add engine oil if required (page 50). Check for leaks.
2. Fuel level—fill fuel tank when necessary (page 47). Check for leaks.
3. Coolant level—add coolant if required. Check for leaks (pages 45 – 46).
4. Front and rear brakes—check operation; make sure there is no brake fluid leakage (pages 40 – 42).

5. Tyres—check condition and pressure (pages 52 – 57).
6. Drive chain—check condition and slack (pages 116 – 117). Adjust and lubricate if necessary.
7. Throttle—check for smooth opening and full closing in all steering positions (page 114).
8. Lights and horn—check that headlight, brake/taillights, position light, license light, turn signals, indicators and horn function properly.
9. Engine stop switch—check for proper function (page 65).
10. Side stand ignition cut-off system—check for proper function (page 124).

STARTING THE ENGINE

Always follow the proper starting procedure described below.

This motorcycle is equipped with a side stand ignition cut-off system. The engine cannot be started if the side stand is down, unless the transmission is in neutral. If the side stand is up, the engine can be started in neutral or in gear with the clutch lever pulled in. After starting with the side stand down, the engine will shut off if the transmission is put in gear before raising the side stand.


To protect the catalytic converter in your motorcycle's exhaust system, avoid extending idling and the use of leaded petrol.

Your motorcycle's exhaust contains poisonous carbon monoxide gas. High levels of carbon monoxide can collect rapidly in enclosed areas such as a garage. Do not run the engine with the garage door closed. Even with the door open, run the engine only long enough to move your motorcycle out of the garage.

Do not use the electric starter for more than 5 seconds at a time. Release the start button for approximately 10 seconds before pressing it again.

Preparation

Before starting, insert the key, turn the ignition switch ON and confirm the following:

- The transmission is in neutral (neutral indicator is ON).
- The engine stop switch is at  (RUN).
- The low oil pressure indicator is ON.
- The PGM-FI malfunction indicator lamp (MIL) is OFF.
- The high coolant temperature indicator is OFF.
- The HESD indicator is OFF.
- The immobilizer system (HISS) indicator is OFF.
- The Combined ABS indicator is ON.
(CBR600RR ABS)

The low oil pressure indicator should go off a few seconds after the engine starts. If the low oil pressure indicator lights during operation, stop the engine immediately and check the engine oil level.

(CBR600RR ABS)

The Combined ABS indicator should go off after you ride the motorcycle at a speed above 10 km/h (6 mph).

NOTICE

Operating the engine with insufficient oil pressure can cause serious engine damage.

Starting Procedure

This motorcycle has a fuel-injected engine with an automatic choke. Follow the procedure indicated below.

Any Air Temperature:


- With the throttle completely closed, press the start button.

The engine will not start if the throttle is fully open (because the electronic control module cuts off the fuel supply).

Even if the engine coolant stays below the specified temperature, the cooling fan sometimes starts up running when you rev up the engine, but this is normal.

Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded.

1. Leave the engine stop switch set to  (RUN).
2. Open throttle fully.
3. Press the start button for 5 seconds.
4. Follow the normal starting procedure.

If the engine starts with unstable idle, open the throttle slightly.

If the engine does not start, wait for 10 seconds, then follow steps 1–4 again.

Ignition Cut Off

Your motorcycle is designed to automatically stop the engine and fuel pump if the motorcycle is over-turned (a banking sensor cuts off the ignition system). Before restarting the engine, you must turn the ignition switch to the OFF position and then back to ON.

RUNNING-IN

Help assure your motorcycle's future reliability and performance by paying extra attention to how you ride during the first 500 km (300 miles).

During this period, avoid full-throttle starts and rapid acceleration.

RIDING

Review Motorcycle Safety (pages 1 – 12) before you ride.

Make sure you understand the function of the side stand mechanism. (See **MAINTENANCE SCHEDULE** on page 98 and explanation for **SIDE STAND** on page 124).

Make sure flammable materials such as dry grass or leaves do not come in contact with the exhaust system when riding, idling, or parking your motorcycle.


1. After the engine has been warmed up, the motorcycle is ready for riding.
2. While the engine is idling, pull in the clutch lever and depress the shift lever to shift into 1st (low) gear.

3. Slowly release the clutch lever and at the same time gradually increase engine speed by opening the throttle. Coordination of the throttle and clutch lever will assure a smooth positive start.

4. When the motorcycle attains a moderate speed, close the throttle, pull in the clutch lever and shift to 2nd gear by raising the shift lever.

This sequence is repeated to progressively shift to 3rd, 4th, 5th and 6th (top) gear.

5. Coordinate the throttle and brakes for smooth deceleration.
6. Both front and rear brakes should be used at the same time and should not be applied strongly enough to lock the wheel, or braking effectiveness will be reduced and control of the motorcycle be difficult.

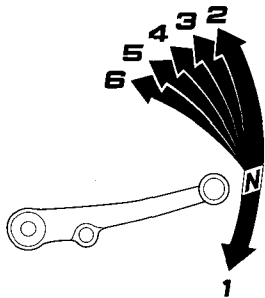

BRAKING

For normal braking, apply both the brake pedal and lever while down-shifting to match your road speed. For maximum braking, close the throttle and firmly apply the pedal and lever; pull in the clutch lever before coming to a complete stop to prevent stalling the engine.

Important Safety Reminders:

- Independent operation of only the brake lever or brake pedal reduces stopping performance.
- Extreme application of the brake controls may cause wheel lock, reducing control of the motorcycle.
- When possible, reduce speed or brake before entering a turn; closing the throttle or braking in mid-turn may cause wheel slip. Wheel slip will reduce control of the motorcycle.
- When riding in wet or rainy conditions, or on loose surfaces, the ability to maneuver and stop will be reduced. All of your actions should be smooth under these conditions. Rapid acceleration, braking or turning may cause loss of control. For your safety, exercise extreme caution when braking, accelerating or turning.
- When descending a long, steep grade, use engine compression braking by down-shifting, with intermittent use of both brakes. Continuous brake application can overheat the brakes and reduce their effectiveness.
- Riding with your foot resting on the brake pedal or your hand on the brake lever may actuate the brakelight, giving a false indication to other drivers. It may also overheat the brakes, reducing effectiveness.

Combined ABS (CBR600RR ABS)

This model is equipped with Combined ABS (Combined Anti-lock Brake System).

When the ignition switch is turned ON, the system performs a self-analysis and when the vehicle speed reaches 10 km/h (6 mph) the system starts to operate and remains on while riding. Combined ABS is self-checking.

Combined ABS is an electrically integrated system consisting of the Combined Brake System and Anti-lock Brake System. Combined ABS controls braking force by accurately monitoring the amount of force applied to the brakes and wheel speed. It balances the front-to-rear braking distribution, and has an anti-lock function designed to help prevent wheel lock up during hard braking. Moreover, Combined ABS helps provide more riding stability when braking hard and suddenly. Although the wheel may not lock up, if you are

braking too hard in a turn, the motorcycle can still lose traction causing a loss of control. In general, you'll achieve the best results by braking while running in a straight line.

Even if the front brake lever and the rear brake pedal are operated independently, the brake force is distributed appropriately to the front and the rear. However, for full braking effectiveness, use both the lever and pedal simultaneously, as you would with a conventional motorcycle braking system.

In some situations, a motorcycle with Combined ABS may require a longer stopping distance to stop on loose or uneven surfaces than an equivalent motorcycle without Combined ABS.

Combined ABS cannot make up for road conditions, bad judgment, or improper operation of the brakes, and cannot stop rear wheel lift completely. It is still your responsibility to ride at reasonable speeds for weather, road surface, and traffic conditions, and to leave a margin of safety.

- The anti-lock brake function of the Combined ABS may be activated by riding over a sharp drop or rise in the road level while operating the brake.
- It is important to follow the tyre recommendations (page 56). The Combined ABS computer works by comparing wheel speed. Non-recommended tyres can affect wheel speed and may confuse the Combined ABS computer.

- Combined ABS does not function at low speeds (approximately 6 km/h (4 mph) or below).
- Combined ABS does not function if the battery is discharged.
- Combined ABS does not function if the ABS main or the ABS motor fuses are blown.
- When Combined ABS does not function, the brakes work like a conventional braking system. On conventional braking systems, operating the front brake lever applies the front brake and operating the rear brake pedal applies the rear brake.

You may feel a change in the way the brake lever/pedal reacts when it is operated under the following conditions:

- Immediately after turning the ignition switch ON
- After braking to a stop

Combined ABS indicator (CBR600RR ABS)

Normally, this indicator comes on when the ignition is turned ON, and goes off after you ride the motorcycle at a speed above 10 km/h (6 mph). If there is a problem with Combined ABS, the indicator lights or flashes and remains on. Combined ABS does not operate when the Combined ABS indicator is on.

If the Combined ABS indicator lights or flashes and remains on while riding, stop the motorcycle in a safe place and turn off the engine.

Turn the ignition ON again. The indicator should come on, and go off after you ride the motorcycle at a speeds above 10 km/h (6 mph). If it does not go off, Combined ABS is not functioning, but the brakes still provide normal stopping ability like a conventional braking system. However, you should have the system checked by your Honda dealer as soon as possible.

The Combined ABS indicator may flash if:

- The front wheel leaves the ground for 1 second or more.
- Either brake is applied continuously from 0 km/h (0 mph) to 50 km/h (31 mph).
- You turn the rear wheel while the motorcycle is upright on the stand.

This is normal but the Combined ABS is not in operation. To activate the system again, turn the ignition OFF, then ON again.

PARKING

1. After stopping the motorcycle, shift the transmission into neutral, turn the handlebar fully to the left, turn the ignition switch OFF and remove the key.
2. Use the side stand to support the motorcycle while parked.

Park the motorcycle on firm, level ground to prevent it from falling over.

If you must park on a slight incline, aim the front of the motorcycle uphill to reduce the possibility of rolling off the side stand or overturning.

3. Lock the steering to help prevent theft (page 69).

Make sure flammable materials such as dry grass or leaves do not come in contact with the exhaust system when parking your motorcycle.

To avoid possible heat damage to your motorcycle or personal belongings, do not cover the exhaust muffler with a protective cover or any clothing within 20 minutes after shutting off the engine.

ANTI-THEFT TIPS

1. Always lock the steering and never leave the key in the ignition switch. This sounds simple but people do forget.
2. Be sure the registration information for your motorcycle is accurate and current.
3. Park your motorcycle in a locked garage whenever possible.
4. Use an additional anti-theft device of good quality.
5. Put your name, address, and phone number in this Owner's Manual and keep it on your motorcycles at all times. Many times stolen motorcycles are identified by information in the Owner's Manuals that are still with them.

NAME: _____

ADDRESS: _____

PHONE NO: _____

MAINTENANCE

THE IMPORTANCE OF MAINTENANCE

A well-maintained motorcycle is essential for safe, economical and trouble-free riding. It will also help reduce air pollution.

To help you properly care for your motorcycle, the following pages include a Maintenance Schedule and a Maintenance Record for regularly scheduled maintenance.

These instructions are based on the assumption that the motorcycle will be used exclusively for its designed purpose. Sustained high speed operation or operation in unusually wet or dusty conditions will require more frequent service than specified in the Maintenance Schedule. Consult your Honda dealer for recommendations applicable to your individual needs and use.

If your motorcycle overturns or becomes involved in a crash, be sure your Honda dealer inspects all major parts, even if you are able to make some repairs.

WARNING

Improperly maintaining this motorcycle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

MAINTENANCE SAFETY

This section includes instructions on some important maintenance tasks. You can perform some of these tasks with the tools provided — if you have basic mechanical skills.

Other tasks that are more difficult and require special tools are best performed by professionals. Wheel removal should normally be handled only by a Honda technician or other qualified mechanic; instructions are included in this manual only to assist in emergency service.

Some of the most important safety precautions follow. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.

SAFETY PRECAUTIONS

- Make sure the engine is off before you begin any maintenance or repairs. This will help eliminate several potential hazards:
 - * **Carbon monoxide poisoning from engine exhaust.**
Be sure there is adequate ventilation whenever you operate the engine.
 - * **Burns from hot parts.**
Let the engine and exhaust system cool before touching.
 - * **Injury from moving parts.**
Do not run the engine unless instructed to do so.
- Read the instructions before you begin, and make sure you have the tools and skills required.
- To help prevent the motorcycle from falling over, park it on a firm, level surface, using the side stand or a maintenance stand to provide support.

- To reduce the possibility of a fire or explosion, be careful when working around petrol or batteries. Use only nonflammable solvent, not petrol, to clean parts. Keep cigarettes, sparks and flames away from the battery and all fuel-related parts.

Remember that your Honda dealer knows your motorcycle best and is fully equipped to maintain and repair it.

To ensure the best quality and reliability, use only new Honda Genuine Parts or their equivalents for repair and replacement.

MAINTENANCE SCHEDULE

Perform the Pre-ride Inspection (page 78) at each scheduled maintenance period.

I: INSPECT AND CLEAN, ADJUST, LUBRICATE OR REPLACE IF NECESSARY

C: CLEAN R: REPLACE A: ADJUST L: LUBRICATE

The following items require some mechanical knowledge. Certain items (particularly those marked * and **) may require more technical information and tools. Consult your Honda dealer.

- * *Should be serviced by your Honda dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the Official Honda Shop Manual.*
- ** *In the interest of safety, we recommend these items be serviced only by your Honda dealer.*

Honda recommends that your Honda dealer should road test your motorcycle after each periodic maintenance is carried out.

- NOTES:
- (1) At higher odometer readings, repeat at the frequency interval established here.
 - (2) Service more frequently when riding in unusually wet or dusty areas.
 - (3) Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE
			× 1,000 km	1	6	12	18	24	30	36	
			× 1,000 mi	0.6	4	8	12	16	20	24	
		NOTE	MONTH								
* FUEL LINE						I		I		I	—
* THROTTLE OPERATION						I		I		I	114
* AIR CLEANER		NOTE (2)					I			I	—
* SPARK PLUGS											108
* VALVE CLEARANCE								I			—
ENGINE OIL				R		R		R		R	102
ENGINE OIL FILTER				R		R		R		R	104
RADIATOR COOLANT		NOTE (3)				I		I		R	115
* COOLING SYSTEM						I		I		I	—
* SECONDARY AIR SUPPLY SYSTEM						I		I		I	—


ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE	
			× 1,000 km	1	6	12	18	24	30	36		
			× 1,000 mi	0.6	4	8	12	16	20	24		
	DRIVE CHAIN		EVERY 1,000 km (600 mi) I, L								116	
	DRIVE CHAIN SLIDER				I			I		I		122
	BRAKE FLUID	NOTE (3)		I	I	R		I	I	R		40, 42
	BRAKE PADS WEAR			I	I	I		I	I	I		132, 133
	BRAKE SYSTEM		I		I			I		I		40-42, 132-133
*	BRAKELIGHT SWITCH				I			I		I		139
*	HEADLIGHT AIM				I			I		I		77
	CLUTCH SYSTEM		I	I	I	I		I	I	I		43
**	EXHAUST GAS CONTROL VALVE CABLE		EVERY 24,000 km (16,000 mi) I								-	
	SIDE STAND				I			I		I		124
*	SUSPENSION				I			I		I		123
*	NUTS, BOLTS, FASTENERS		I		I			I		I		-
**	WHEELS/TYRES				I			I		I		-
**	STEERING HEAD BEARINGS		I		I			I		I		-

TOOL KIT

The tool kit (1) is under the rear seat (page 71).

Some roadside repairs, minor adjustments and parts replacement can be performed with the tools contained in the kit.

- Pin spanner
- 8 × 12 mm Open end wrench
- 10 × 14 mm Open end wrench
- Pliers
- Standard/Phillips screwdriver
- Screwdriver handle
- Extension bar
- 5 mm Hex wrench
- 32 mm Box end wrench
- 0.7 mm Feeler gauge
- 19 mm Box end wrench
- Helmet holder wire
- Tool bag

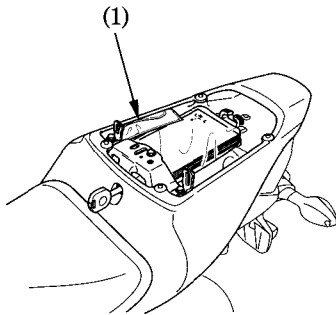


(1) Tool kit

SERIAL NUMBERS

The frame and engine serial numbers are required when registering your motorcycle. They may also be required by your dealer when ordering replacement parts. Record the numbers here for your reference.

FRAME NO. _____

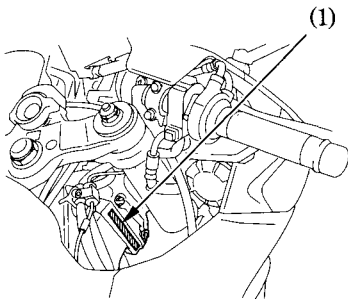


(1) Frame number
100

The frame number (1) is stamped on the right side of the steering head.

The engine number (2) is stamped on top of the crankcase.

ENGINE NO. _____

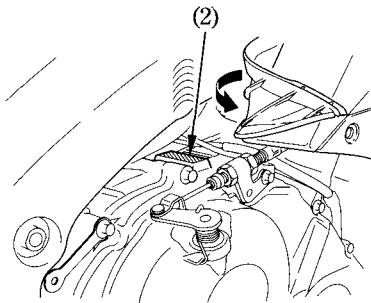

(2) Engine number

COLOUR LABEL


〈 Except BR type 〉

The colour label (1) is attached to the rear fender below the rear seat (see page 71).

It is helpful when ordering replacement parts. Record the colour and code here for your reference.

COLOUR _____

CODE _____

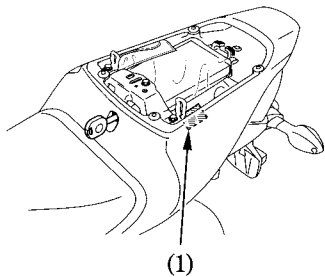

(1) Colour label

ENGINE OIL

Refer to the Safety Precautions on page 95 .

Oil Recommendation


API classification	SG or higher except oils labeled as energy conserving on the circular API service label
Viscosity	SAE 10W-30
JASO T 903 standard	MA

Suggested Oil
Honda "4-STROKE MOTORCYCLE OIL" or equivalent.


Your motorcycle does not need oil additives. Use the recommended oil.

Do not use oils with graphite or molybdenum additives. They may adversely affect clutch operation.

Do not use API SH or higher oils displaying a circular API "energy conserving" service label on the container. They may affect lubrication and clutch performance.

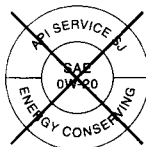

NOT RECOMMENDED

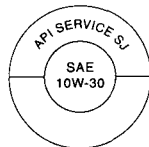


OK

Do not use non-detergent, vegetable, or castor based racing oils.


Viscosity:

Viscosity grade of engine oil should be based on average atmospheric temperature in your riding area. The following provides a guide to the selection of the proper grade or viscosity of oil to be used at various atmospheric temperatures.

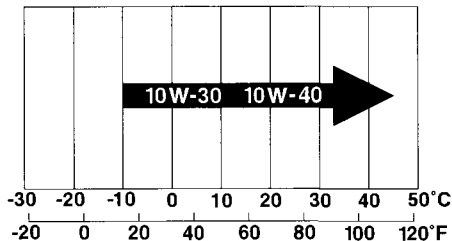

JASO T 903 standard

The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines. There are two classes: MA and MB. Oil conforming to the standard is labeled on the oil container. For example, the following label shows the MA classification.

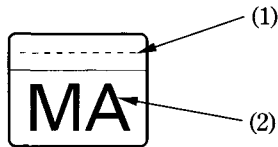

PRODUCT MEETING JASO T 903
COMPANY GUARANTEEING THIS MA PERFORMANCE:

- (1) Code number of the sales company of the oil
- (2) Oil classification

Engine Oil and Filter

Engine oil quality is the chief factor affecting engine service life. Change the engine oil as specified in the maintenance schedule (page 97).

When running in very dusty conditions, oil changes should be performed more frequently than specified in the maintenance schedule.

Please dispose of used engine oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local recycling center or service station for reclamation. Do not throw it in the trash or pour it on the ground or down a drain.


Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

Changing the oil filter requires a special oil filter tool and a torque wrench. If you do not have these tools and the necessary skill, we recommend that you have your Honda dealer perform this service.

If a torque wrench is not used for this installation, see your Honda dealer as soon as possible to verify proper assembly.

Change the engine oil with the engine at normal operating temperature and the motorcycle on its side stand to assure complete and rapid draining.


1. Remove the lower cowl (page 75).
2. Place a drain pan under the crankcase.
3. To drain the oil, remove the oil filler cap, oil drain bolt (1) and sealing washer (2).

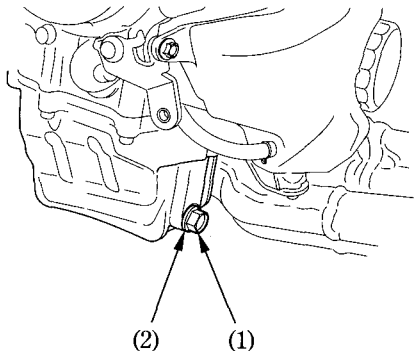

(1) Oil drain bolt

(2) Sealing washer


4. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out. Discard the oil filter.

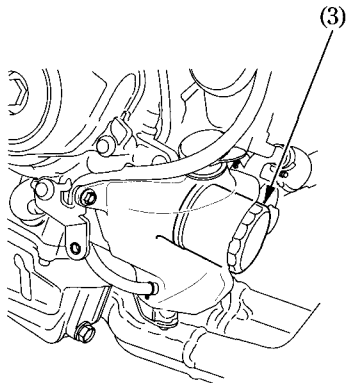

(3) Oil filter

5. Apply a thin coat of engine oil to the new oil filter rubber seal (4).
6. Using a special tool and a torque wrench, install the new oil filter and tighten to a torque of:
26 N·m (2.7 kgf·m , 19 lbf·ft)

Use only the Honda Genuine oil filter or a filter of equivalent quality specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause engine damage.

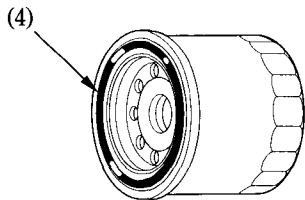

(4) Oil filter rubber seal

7. Check that the sealing washer on the drain bolt is in good condition and install the bolt. Replace the sealing washer every other time the oil is changed, or each time if necessary.
Oil drain bolt torque:
30 N·m (3.1 kgf·m , 22 lbf·ft)
8. Fill the crankcase with the recommended grade oil; approximately:
2.8 ℓ (3.0 US qt , 2.5 Imp qt)
9. Install the oil filler cap.
10. Start the engine and let it idle for 3–5 minutes.
11. 2–3 minutes after stopping the engine, check that the oil level is at the upper level mark in the inspection window with the motorcycle upright on firm, level ground. Make sure there are no oil leaks.
12. Install the lower cowl (page 75).

SPARK PLUGS

Refer to the Safety Precautions on page 95 .
Recommended plugs:

Standard:

IMR9E-9HES (NGK) or
VUH27D (DENSO)

NOTICE


Never use a spark plug with an improper heat range. Severe engine damage could result.

This motorcycle uses the spark plugs that have an iridium coated center electrode. Be sure to observe the following when servicing the spark plugs.

- Do not clean the spark plug. If the electrode is contaminated with accumulated objects or dirt, replace the spark plug with a new one.
- To check the spark plug gap, use only a “wire-type feeler gauge.” To prevent damaging the iridium coating of the center electrode, never use a “leaf-type feeler gauge.”
- Do not adjust the spark plug gap. If the gap is out of specification, replace the spark plug with a new one.


To inspect or replace the spark plugs, use an appropriate spark plug wrench or see your Honda dealer.

1. Remove the middle cowls (page 76).
2. Disconnect the radiator fan connector (1).
3. Release the wire harness clip (2) from the radiator heat guard (3).
4. (CBR600RR ABS only)
Remove the brake hose mount bolt (4).
5. (CBR600RR)
Remove the radiator lower mount nut (5) and radiator lower mount bolt (6).
(CBR600RR ABS)
Remove the radiator lower mount bolt.
6. Remove the radiator upper mount bolt (7).

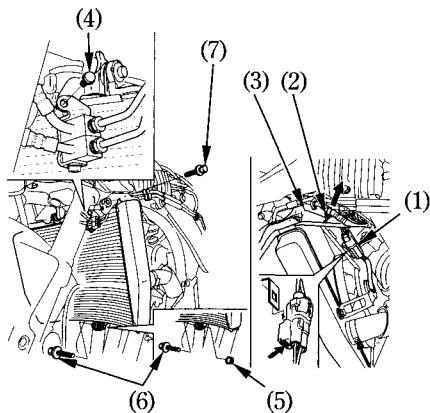

- (1) Radiator fan connector
- (2) Wire harness clip
- (3) Radiator heat guard
- (4) Brake hose mount bolt
(CBR600RR ABS only)
- (5) Radiator lower mount nut
(CBR600RR only)
- (6) Radiator lower mount bolt
- (7) Radiator upper mount bolt


7. Remove the water pipe guard (8) by removing the bolt (9).

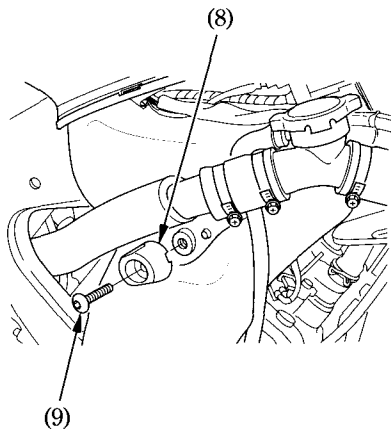

(8) Water pipe guard
(9) Bolt

8. Move the radiator (10) out of the way and remove the grommet (11) from the hook (12).

9. Pull the radiator toward the front.

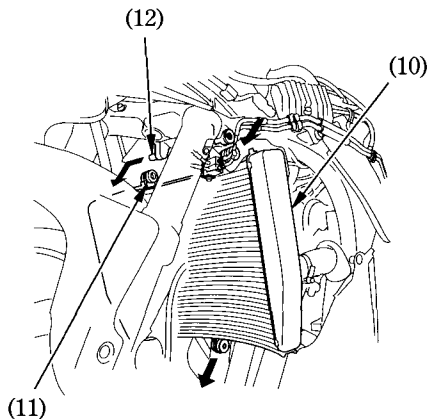

(10) Radiator
(11) Grommet

(12) Hook